

Piezoresistive Accelerometer

ASC 66C1



- ▶ Uniaxial
- ▶ Wheatstone Bridge
- ▶ mV Output
- ▶ Aluminium Housing
- ▶ Made in Germany



Features

- ▶ Range 500g, 1000g and 2000g
- ▶ Small Size
- ▶ Light Weight
- ▶ DC Response
- ▶ $\pm 5000g$ Shock Resistance
- ▶ Gas Damped

Options

- ▶ Customised Cable Length
- ▶ Customised Connector
- ▶ TEDS Module
- ▶ Equipment Exchange (EQX)

Applications

- ▶ Automotive Crash Testing
- ▶ Shock Testing

Piezoresistive MEMS Technology

The accelerometer is based on an advanced piezoresistive MEMS technology and can be used in a low frequency response up from 0Hz. The piezoresistive sensor element is made of monolithic resistors. These resistors are attached to carrier-elements and are electrically connected in a Wheatstone bridge. The electrical signal changes proportional to the vibration.


Description

The model ASC 66C1 is a uniaxial accelerometer based on piezoresistive technology. The ASC 66C1 is a small and compact accelerometer.

The housing is a flat design made of hard anodised aluminium. Due to low mass, the model is ideal for testing on light-weight structures.

The sensing element has integrated overload stops and therefore the silicon chip is highly shock resistant. The ASC 66C1 has an excellent non-linearity over a wide frequency response. Electrically the units features a Wheatstone bridge configuration.

The model ASC 66C1 can be obtained with all common sensor ID modules. A very high flexible and rugged cable provides a simple mounting. The model ASC 66C1 is factory calibrated and is equipped with 6 meter cable as a standard.

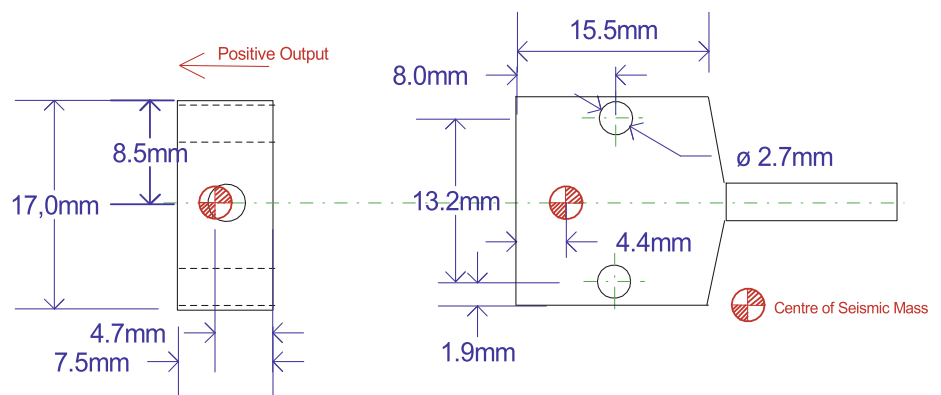

Typical Specifications

MODEL NUMBER ASC 66C1

Type: MEMS Piezoresistive Accelerometer

DYNAMIC

		Range (\pm g)		
		500	1000	2000
Model		66C1	66C1	66C1
Sensitivity ¹	mV/g	0.4	0.15	0.13
Frequency response: \pm 5%	Hz		2500	
Resonance frequency	kHz	15	15	26
Amplitude non-linearity	% FSO		\pm 1	
Damping ratio			0.7	
Transverse sensitivity	%		<3	
Shock limit	\pm g		5000	
Recovery time	s		0.5	

ELECTRICAL

Excitation voltage	V DC	3 to 10	3 to 10	3 to 10
Zero acceleration output	mV		\pm 25	
Insulation resistance	M Ω		>100	
Isolation			Case isolated	

ENVIRONMENTAL

Temperature coefficient of bias (Thermal zero shift)	g/ $^{\circ}$ C	\pm 0.25	\pm 0.5	\pm 1
Temperature coefficient of sensitivity (Thermal sensitivity shift)	%/ $^{\circ}$ C		-0.2	
Operating temperature range	$^{\circ}$ C		-20 to +80	
Storage temperature range	$^{\circ}$ C		-25 to +100	
Humidity / Sealing			Epoxy sealed	

PHYSICAL

Sensing element		Piezoresistive MEMS
Case material		Anodized Aluminium
Mounting		3 mm screws / Adhesive
Weight (without cable)	gram	ASC 66C1: 3 gram
Cable		12 gram/meter; AWG 30, Polyurethane (PUR); Diameter: 3mm

FACTORY CALIBRATION (SUPPLIED WITH THE SENSOR)

Shaker Calibration (Sinusoidal)			
Range	500g	1000g	2000g
Sensitivity	at 80Hz and 20g		
Frequency Response	40Hz to 2500Hz		
Pendulum (Shock) Calibration			
Range	500g	1000g	2000g
Sensitivity	5 shocks at 100g		

CALIBRATION DIN ISO 17025 (ORDER SEPARATELY)

Shaker Calibration (Sinusoidal)			
Range	500g	1000g	2000g
Sensitivity	at 80Hz and 20g		
Frequency Response	25Hz to 3150Hz		
Pendulum (Shock) Calibration			
Range	500g	1000g	2000g
Linearity	One shock each at 50g, 100g, 150g, 200g and 250g		

Cable Code/Pin Configuration

Red	Supply +
Black	Supply -
Green	Signal +
White	Signal -

ORDERING INFORMATION

ASC	66C1	500	6	A
	Model number	Range (Ex. 500 is 500g)	Cable length (meters)	Connector & Pinout
				A: no connector

ASC GmbH - Advanced Sensors Calibration

Ledererstraße 10 · 85276 Pfaffenhofen · Germany · Tel. +49 (0) 8441 786 547 -0 · office@asc-sensors.de

All data, information, statements, photographs and graphic illustrations made in this data sheet are without any obligation and raise no liabilities to or form part of any sales contracts of ASC GmbH or any affiliates for components referred to herein.

© ASC GmbH 2011. All rights reserved. No part of this copyrighted work may be reproduced, modified or distributed in any form or by any means, or stored in any database or retrieval system, without the prior written permission of ASC GmbH or its affiliates. Any such unauthorized use for any purpose is a violation of the relevant copyright laws. Revision **6th June 2018**



Instrumentation Devices Srl
Via Acquanera 29 - 22100 COMO (Italy)
ph +39 031 525 391- fax +39 031 507 984
info@instrumentation.it - www.instrumentation.it