

Universal adaptor for mounting the CLS^x steering effort sensor on the vehicle's original steering wheel



The innovative adaptor for mounting the CLS^x steering sensor is suitable for all steering wheels from \varnothing 280 mm to \varnothing 430 mm.

Highlights

- Suitable for standard vehicle steering wheels, other sizes on request
- Stator support for the steering angle fixation included
- Including steering wheel for CLS^x steering wheel sensor (\varnothing 360 mm)
- Weight including CLS^x and steering wheel approx. 4.4 kg
- Steering angle stop optionally available

Warning


- Before installing the universal adaptor, the **driver airbag** must be **deactivated** or removed if a driver airbag is present.
- The universal adaptor must only be installed by qualified personnel.
- After installation of the universal adaptor, the general operating permit of the vehicle expires. For the tests, only qualified drivers may use the vehicle on routes approved for this.

Overview of the available variants

Order Code		article number
H-ZUB-CMX-CLSx-TSW	Universal adaptor for the CLS ^x Steering Effort Sensors	13800021

Included accessories

- Stator bracket
- Steering wheel

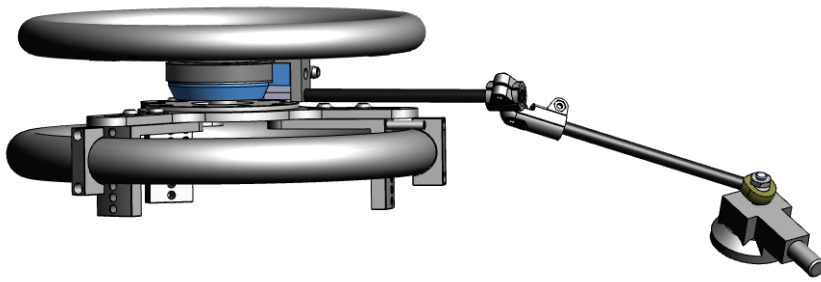

Dimensions

